

VT904 and LT604 Geofence Alerts:

Please note that our latest 4G Tracker introduces an enhanced Geofence Alert system. When the device moves in or out of a designated geofence area, it promptly sends an alert to the corresponding mobile application (APP) and website. However, it no longer supports alert notifications via text messages.

To ensure optimal functionality, we have introduced the MOVE ALERT feature, which enables alerts through multiple channels. By setting up the MOVE ALERT and activating it with an ARM Command, users can receive notifications through text messages, the dedicated mobile application (APP), and the associated website.

Expected Alert types:

- Geofence – app only (confirmed app only NO text)
- Geofence + Move – text and app (MOVE only if the tracker is ARMED via text commands)
- Move – text and app (only when the tracker is ARMED via text command)
- Arm – text and app notifications on ACC (text when ARMED via text command, and changes state on real view to ACC ON)
- Shock – text and app (only when the tracker is ARMED via text command)
- Power cut – text and app (any time does not need to be armed)
- SOS- text and app (text only when SOS message has been sent, app will show even text message not sent)
- SHOCK, ACC ON, MOVE, will only give text if the tracker is ARMED via text command. Usually only gives 1 message for each function.