

PROGRAMMING M560 & MX750S

1. Disarm alarm.
2. Turn ignition on then off.
3. Press override button three (3) times within 10 seconds of ignition off to select programming mode. System will 'wolf whistle' to confirm programme mode.
4. There are nine (9) programmable features. These are listed below. To select a programme, enter the programming mode as 3 above, press and release the required number of times to select the programme item. The siren will chirp as confirmation after each press. One chirp after one press, 2 chirps after the second press and so on. Do not press too quickly. Ensure that the correct number of chirps are given relative to the feature.
5. The feature is turned 'on' by pressing button ONE of the remote. The feature is turned 'off' by pressing button TWO. The alarm will chirp once to indicate function 'on' and twice to indicate function 'off'. The feature can be toggled on and off at will using the remote. 'Defaults' shown in the table indicates the factory default settings.
6. You can either go directly to a particular programme by pressing the required number of times, or you can go through each programme turning them on or off in sequence.
7. To exit programme mode you have 3 options;
 - a) turn ignition on then off.
 - b) press override a tenth time.
 - c) do nothing for 15 seconds.
 System will give a 'wolf whistle' to confirm memory and end of programme mode.

No. of times to press	No. of chirps	Feature	Button ONE (One chirp to confirm)	Button TWO (Two chirps to confirm)
1	1	Auto (passive) Arming	On	Off Default
2	2	Chirps	On Default	Off
3	3	Ignition Door Lock	On	Off Default
4	4	Auto (passive) Door Lock	On	Off Default
5	5	Door Lock Pulse	0.8 sec Default	3.5 sec
6	6	Door Diagnostics	On Default	Off
7	7	Perimeter Nite Lite	On Default	Off
8	8	Automatic Engine Disable	On Default	Off
9	9	Siren Sounding	Multiple Sounding Default	NSW Sounding